



**brennenstuhl®**

# SICHERHEITSINFORMATIONEN

## SAFETY INFORMATION

---

|           |                                     |           |                              |           |                              |
|-----------|-------------------------------------|-----------|------------------------------|-----------|------------------------------|
| <b>DE</b> | Sicherheitsinformationen            | <b>HU</b> | Biztonsági információk       | <b>LT</b> | Saugos informacija           |
| <b>EN</b> | Safety information                  | <b>RU</b> | Информация о безопасности    | <b>LV</b> | Drošības informācija         |
| <b>FR</b> | Informations sur la sécurité        | <b>TR</b> | Güvenlik bilgileri           | <b>HR</b> | Sigurnosne informacije       |
| <b>NL</b> | Veiligheidsinformatie               | <b>FI</b> | Turvallisuustiedot           | <b>RO</b> | Informații privind siguranța |
| <b>IT</b> | Informazioni sulla sicurezza        | <b>GR</b> | Πληροφορίες για την ασφάλεια | <b>BG</b> | Информация за безопасност    |
| <b>SE</b> | Säkerhetsinformation                | <b>PT</b> | Informações de segurança     | <b>DK</b> | Oplysninger om sikkerhed     |
| <b>ES</b> | Información de seguridad            | <b>EE</b> | Ohutusalane teave            | <b>NO</b> | Sikkerhetsinformasjon        |
| <b>PL</b> | Informacje dotyczące bezpieczeństwa | <b>SK</b> | Bezpečnostné informácie      | <b>UA</b> | Інформація з техніки безпеки |
| <b>CZ</b> | Bezpečnostní informace              | <b>SI</b> | Varnostne informacije        | <b>AR</b> | معلومات السلامة              |

---

[WWW.BRENNENSTUHL.COM](http://WWW.BRENNENSTUHL.COM)

04/11/2024

  
**brennenstuhl®**  


**Name: Cable reel**

**Model: KT A162 N315 IP44 GB  
1 24100 3 110**

**16+2 m H07RN-F 3G1,5 mm<sup>2</sup>**

—  **1760 W**

 **1000 W**

**110 V~, IP44**

**NOTE:**

1. If the overload protection has been triggered
  - unplug the mains plug
  - push the red button
2. Damaged supply cables must be replaced by a licensed electrician
3. The thermal fuse must be replaced with a component with the same rated values by a trained technician
4. The plugs must be disconnected from the outlets before the cable is coiled or uncoiled
5. Make sure when changing lines that the shortest possible path is used to connect the L/N conductors to the clamps and that the earth wire is connected to the marked clamp and is at least 12 mm longer than the other L/N conductors
6. DO NOT EXCEED THE MAXIMUM LOAD



**Hugo Brennenstuhl GmbH & Co. KG**  
Seestraße 1-3 · D-72074 Tübingen

**Brennenstuhl UK Ltd.**

No 1 Royal Exchange · London EC3V 3DG, UK

[www.brennenstuhl.com](http://www.brennenstuhl.com)



Made in China

0472518/2822

**110 V~**



0472515/813